

2 and 3ft Eurofit Spinner Bracket

for use with Motorized Spinner Base #191567 (sold separately)

Product Parts

- 1 - Bracket Base
- 2 - Base Extender (x2)
- 3 - Screw (x4)
- 4 - 5mm Hex Wrench



(Parts not to Scale)




Display Set-Up

Step 1

To attach the Base Extenders (2), use the 5mm Hex Wrench (4) to fasten the Screws (3) through them to the Bracket Base (1).

If displaying a 2ft Eurofit graphic, add the Base Extenders (2) inward on the Bracket Base (1) as shown:

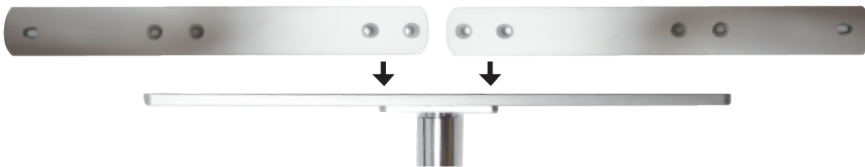


If displaying a 3ft Eurofit graphic, add the Base Extenders (2) inward on the Bracket Base (1) as shown:



Step 2

The Motorized Spinner Base (not included) comes with a center spindle that is only compatible with Sail Sign displays and should be set aside. Align the slot on the bottom of the Bracket Base (1) with the pin on the Spinner Base. Tighten the metal cylinder to connect the Spinner Bracket to the Spinner Base.

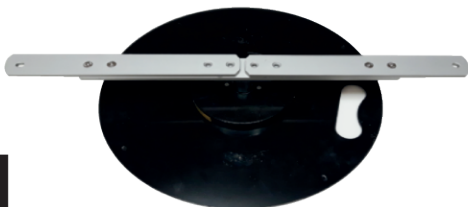

Pin on Spinner Base




Center Post Slot

Do not damage the Spinner Base by rotating the Bracket Base.

Step 3

Remove the feet from an existing Eurofit Display (sold separately). Compatible displays will have a short pole attached to the feet with a screw similar to the ones included in this kit. Remove the short poles and attach them to the outer edge of the Base Extenders (2) as shown:

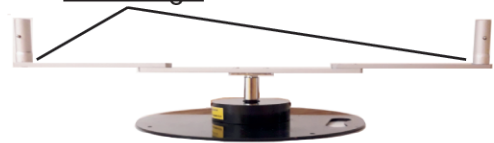

Reattach the rest of the Eurofit Display and plug in the motor to start the rotation.

Storage and Care

Recommended for indoor use only. To clean, unplug the display from any power and wipe with a damp cloth. Store in a cool, dry location.