

X-DISPLAY BANNER STAND

SET-UP INSTRUCTIONS

Components	
Quantity	Description
2	Top arms with hooks
1	Body with three (3) supporting legs
1	Carry Bag

ATTENTION!


Always follow instructions step-by-step to avoid damage to display. Never force components.

For Graphics 24" x 72" and 36" x 72" with #2 Grommets at 1" centers in corners.

Step 1

Insert *Top arms with hooks* into body of display.

Hooks should be facing towards front of display.

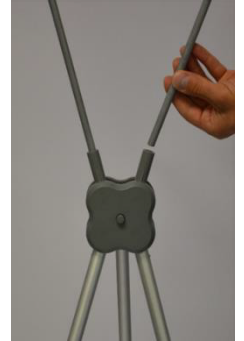

Step 2

Press button on *Body* and hold to release gear mechanism.

Begin moving *Top arms with hooks* away from each other. Release button.

Move *Top arms with hooks* until they click into first setting for 24" Width.

For 36" width, press button on *Body* again and hold to release gear mechanism; move *Top arms with hooks* away from each other. Release button. Move *Top arms with hooks* until they click into second setting for 36" Width.



Step 3

Loosen knob on rear of *Body* to adjust back leg out and into supporting position.

Once in position, tighten knob.

ATTENTION! Do not overtighten knob.



Step 4

Hook banner on to display; attach banner on *Top Arms* first, bend *Top Arms* slightly forward and attach bottom of banner on to front supporting legs. Then slowly release the *Tom Arms* back into place.

For increased banner tension, lengthen *Top Arms* by loosening at connection, extending Arm, then tightening twist lock to secure in position.

ATTENTION! Do not overtighten *Top Arm* adjustment twist lock.

ATTENTION! Ensure both *Top Arms* are extended to the same length.

