decal has arrived Your ANESOM

See reverse side for application instructions

HOW TO APPLY YOUR VINYL DECAL

Vinyl decals can be applied on any smooth or slightly textured surface, such as walls, glass, metal, wood...Before applying decals, make sure that the surface is dry and free of dust and dirt!!

WHAT YOU RECEIVE



A White backing

B Vinyl decal

- **C** Transfer tape
 - Plastic Applicator

CAUTION:

Before applying on freshly painted walls, allow at least 2 weeks for the paint to dry!

Temperature of application surface should be above 40°F.

If your decal is fairly large, get a friend to help you set it up. That's also much more fun.



Step 1

Lay your decal on a rigid flat surface. Firmly rub over the decal with the plastic applicator (included in your order), to make sure the vinyl will properly adhere to the transparent application tape



Remove the white paper back making sure the vinyl decal properly sticks to the transfer tape. If vinyl elements don't easily adhere to the tape, place the entrire decal face down on the flat surface, then pull the white paper back again.




Position the vinyl decal on the desired surface. Smooth the top edge onto the surface and firmly smooth out the tape all the way down, using the plastic applicator. Avoid bubbles and wrinkles.



Step 4

Firmly rub over the entire tape using the plastic applicator: make sure the vinyl decal is strongly and evenly adhering to the wall surface.

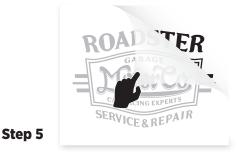

Lift up one corner of the transparent application tape and slowly peel it with a rolling action onto the wall. If part of the decal stays on the tape, simply roll the tape back onto the wall, firmly rub over and peel it off again.



Remove air bubble (if any) by rubbing over the decal with a clean cloth (you can also poke bubbles with a small needle and then smooth it out). Rub over the entire decal very firmly, several times to avoid peeling off over time.